
5-Prong Hi-Lo Seat Assembly Seat Removal Instructions

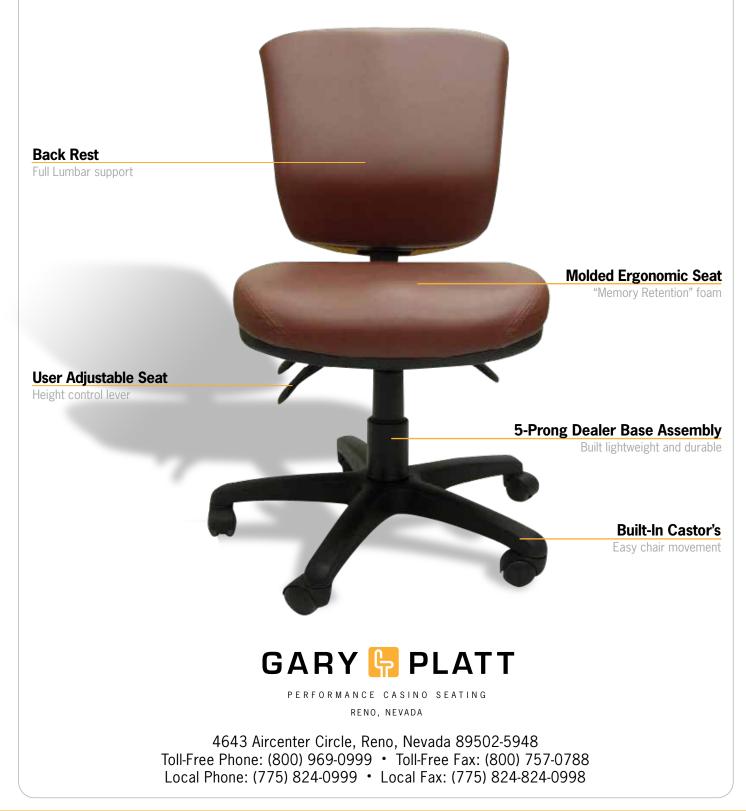

5-Prong Hi-Lo Seat Assembly – Seat Removal Instructions

page 2 of 4

To remove the seat from the 5-Prong base assembly for maintenance, replacement, realignment, or otherwise, follow the below instructions:



1. Carefully lay the chair assembly down onto its back. Ensure carpeting, cardboard, or other similar protective floor covering is used to protect the seat from damage (*Photo A*).

Photo A



Photo B



Photos C & D

2. Brace the chair by resting the 5-Prong base onto your calf's to support and prevent movement during removal (*Photo B*).

- 3. Using a rubber mallet, dead-blow hammer, or other similar device (no steel and/or metal hammers or mallets), strike the bottom of the seat by alternating sides with each blow to dislodge the seat from the 5-Prong base assembly (*Photo's C & D*).
 - a. Several blows may be required to loosen the seat from the 5-Prong base.
 - b. The gas shock may be attached to either the chair bottom or the 5-Prong base assembly once the seat "pops" off.
 - c. Extra caution should be taken while using the rubber mallet to protect any levers, mounting bracket, and/or personal body parts while striking the seat.



PERFORMANCE CASINO SEATING RENO, NEVADA

4643 Aircenter Circle, Reno, Nevada 89502-5948 Toll-Free Phone: (800) 969-0999 • Toll-Free Fax: (800) 757-0788 Local Phone: (775) 824-0999 • Local Fax: (775) 824-824-0998

5-Prong Hi-Lo Seat Assembly Seat Removal Instructions

page 3 of 4

Gas Cylinder Removal Instructions



Once the seat head has been removed (refer to Seat Removal Instructions above) the gas cylinder will remain either with the seat (*Photo E*) or with the 5-Prong understructure assembly (*Photo F*). To remove the gas cylinder follow the below instructions. Gas Cylinder remaining with seat head (*Photo E*):

Photo E



1. Collapse the telescoping cover and move up towards the seat out of the way.

Photo F



Photo G

- 2. Using your dead-blow hammer or rubber mallet, begin tapping around the sides of the gas cylinder (*Photo G*). This may take several rounds to loosen the gas cylinder.
- 3. The gas cylinder will begin to wobble once it has loosened up and should easily pull out of the seat head insert at this point in time.

Note: If you are at a point in the process where the cylinder needs to be completely removed, the cylinder should no longer be in working condition. Removing the gas cylinder using the above steps will almost definitely damage the cylinder rendering it inoperable.



PERFORMANCE CASINO SEATING RENO, NEVADA


4643 Aircenter Circle, Reno, Nevada 89502-5948 Toll-Free Phone: (800) 969-0999 • Toll-Free Fax: (800) 757-0788 Local Phone: (775) 824-0999 • Local Fax: (775) 824-824-0998

5-Prong Hi-Lo Seat Assembly Seat Removal Instructions

page 4 of 4

Gas Cylinder Removal Instructions cont'd

Gas Cylinder remaining with understructure assembly (Photo F):



- 2. Using a rubber mallet or dead-blow hammer, strike the legs (or prongs) of the 5-Prong base assembly, alternating prongs with each blow (*Photo H*).
- 3. Take care of what might lay underneath the 5-Prong base assembly. Once the cylinder breaks free, the base assembly will fall to the ground leaving the gas cylinder in your hand.
- 4. If the cylinder was working properly prior to completing the above operations, then it should be ok for reassembling the seat and re-use.

DISCLAIMER: The content of this document and/or any Gary Platt Manufacturing (GPM) web-site content (<u>www.garyplatt.com</u>), including all information, data, communications, editorial content, photos, graphics, drawings, and in general any materials and services provided herein, is the property of GPM and is protected by the applicable copyright laws.

Furthermore, suppliers MUST strictly follow any and all instructions or damage to the property and/or injury may occur.



PERFORMANCE CASINO SEATING RENO, NEVADA

4643 Aircenter Circle, Reno, Nevada 89502-5948 Toll-Free Phone: (800) 969-0999 • Toll-Free Fax: (800) 757-0788 Local Phone: (775) 824-0999 • Local Fax: (775) 824-824-0998

